



KEYGUARD KEY SAFES INSTRUCTIONS

BURTONSAFES
THE SURE DEFENCE®



PRODUCT WARRANTY

Thank you for choosing Burton Safes.

Your new product carries a 2 year parts and labour warranty in respect of defects in materials and workmanship when registered on our website www.burtonsafes.co.uk/warranty or confirmed over the phone **+44 (0) 1484 663388**. Please also look out for the extended warranty and Safe for Longer stamps on the website or in our brochure.

5 Year extended warranty - At Burton Safes we are so confident in our products that we provide a 5 year extended warranty on all our Home Series safes for home consumers. Please register using the above details.

Safe for Longer - With all Safe for Longer stamped safes we provide a 5 year warranty and a FREE REPLACEMENT* if your product is damaged during BURGLARY or FIRE for the life of the warranty. Please register using the above details.



*Ts & Cs apply, visit our website for full details.

USER INSTRUCTIONS - KEYGUARD KEY SAFES

ABOUT THE LOCK

This lock requires a 3-8 digit code to open the lock. You are provided with an emergency override key for this safe - do not keep the keys inside the safe.

FACTORY CODE: 1-5-9



How to open the safe for the first time

- Open your safe with the emergency key, follow the steps under 'How to open your safe with the emergency key'
- Once open, open the battery cover on the inside of the door
- Insert 4x AA batteries
- Keep the safe door open

How to program a code

- Open the safe door
- Press the reset button (This button is located on the inside of the safe door by the hinges)
- Enter a 3-8 digit code followed by the [B] key
- Your new code is confirmed by 2 beeps and the yellow light flashes twice
- Test your code with the safe door open

How to close the safe

- Ensure that the bolts are fully retracted (if necessary rotate the handle to retract the bolts)
- Gently push the door shut. Always ensure that there are no objects or people in the way of the closing door
- Turn the handle until the stop position is reached

How to open the safe

- Enter your 3-8 digit code followed by the [B] key
- Rotate the handle until the bolts are fully retracted
- Open the safe door

Incorrect Entry

- After 3 incorrect entries a warning beep will sound for 20 seconds
- After another 3 incorrect entries a warning beep will sound for 5 minutes
- When the beeps have stopped, try again

How to open the safe with the emergency key

- Remove the emergency key cover on the front of the key safe
- Insert the emergency key into the lock. The key will only fit into the lock in 1 position. Do not force the key
- Turn the key anti-clockwise then rotate the handle until the bolts are fully retracted
- Open the safe door

Current supply / Battery change

- This safe requires 4x AA batteries to operate
- The battery compartment is located on the inside of the safe door
- When the batteries have low power, red lights will flash on the keypad
- Burton Safes recommends Duracell

Setting a master code

- With the door unlocked, input "00" and press the reset button. Start setting code when the yellow light goes on
- Input the new master code (3 to 8 digits) followed by the [B] key. It will be confirmed by 2 buzzer beeps and the yellow light flashes twice, then setting is done successfully
- If the yellow light flashes with 3 buzzer beeps your code change has not been successful. Please try again

FIXING GUIDE

When fixing your safe, it is important that it is fitted against a solid wall or concrete floor. For more information and guidance visit our website

