

Burton Safes Ltd

The Sure Defence

Raid Control Deposit Safe

Technical Specifications:

£1000 cash rated cupboard safe
Electronic combination lock
1 - 10 digit user codes
Low battery warning
External power supply
Emergency override key
Requires 4 x AA (LR6) alkaline batteries
2-year warranty in respect of materials and workmanship.

WARNING!

**NEVER LEAVE YOUR
EMERGENCY KEY
IN THE SAFE**

Thank you for buying a Burton Safes Raid Control Deposit Safe. Your new safe will arrive locked, with the user code preset to 123. **Please read these instructions thoroughly before attempting to use the safe.**

Opening your safe for the first time:

- Your Raid Control Counter Safe has been supplied with an external power supply box. Insert the batteries into this box, and then plug the lead into the DC jack socket on the keypad.
- Enter the preset user code, which is 123, and then press the A key. The green light will come on to indicate that the safe can be opened, turn the handle clockwise whilst it is lit.

Installing the batteries:

- On the back of the door is a black plastic battery compartment.
- Install the 4 x AA batteries. Mouldings inside the plastic compartment show the correct direction in which to install all of the batteries.
- Replace the cover of the compartment.

Setting the user code:

- Begin with the safe door in the open position, and the locking bolts retracted.
- Press the red button on the back of the door; the orange light will come on.
- Whilst the orange light is lit input your new user code (1 – 10 digits) code, then press the A button. The orange light will flash twice and two beeps will sound.
- Your new code user code is now set.

N.B. After inputting a new user code for the first time always test that it has been accepted by opening and closing the locking mechanism several times with the safe door open.

Opening the safe:

- Enter the preset user code, which is 123, and then press the A key. The green light will come on to indicate that the safe can be opened, turn the handle clockwise whilst it is lit.

Closing the safe:

- Push the door shut and turn the handle in an anti-clockwise direction.

Burton Safes Ltd.

Units 12, Brockholes Business Park, Rock Mill Road, Brockholes, Holmfirth, HD9 7BN
Tel: 01484 663388, Fax: 01484 666338, E-mail: enquiries@burtonsafes.co.uk

Burton Safes Ltd

The Sure Defence

Opening the safe with the emergency key:

- Your safe is equipped with a mechanical override key. This can be used in case of an emergency to override the electronic locking system and open the safe.
- The keyhole is located underneath a circular plastic cover just beneath the number 9 key. To reveal the keyhole carefully remove the plastic cover.
- Insert the override key into the keyhole & turn it anti-clockwise.
- Turn the safes handle in a clockwise direction; your safe will now open.

Setting the time delay period:

- It is possible to programme the lock to have a time delay facility of 1– 99 minutes.
- Decide on the length of time you want to set the delay for. This can be from 1 – 99 minutes, but for the benefit of these instructions we will use 12 minutes as an example.
- Begin with the safe door in the open position, and the locking bolts retracted.
- Enter your user code and then press the A key, the green light will come on.
- Whilst the green light is lit press the following buttons: B 12 A 12 A.
- The time delay period is now set at 12 minutes. ***N.B. For 23 minutes you would input B 23 A 23 A, or for 5 minutes B 05 A 05 A etc.***

Opening the safe when a time delay period is set:

- Pressing any button will activate the time delay period. During this time the orange light will flash every few seconds, and no button will work when pressed.
- At the end of the time delay period the orange light will flash repeatedly for 5 seconds and then two beeps will sound to indicate that a two-minute opening period has begun.
- Enter the your user code and then press the A key. The green light will come on to indicate that the safe can be opened, turn the handle clockwise whilst it is lit.

Turning off the time delay facility:

- Begin with the safe door in the open position, and the locking bolts retracted.
- Enter your user code and then press the A key, the green light will come on.
- Whilst the green light is lit press the following buttons: B 00 A 00 A.
- The time delay period is now set at 0 minutes.

Anti-tamper alarm:

- If a user code is input incorrectly 3 times then the anti-tamper alarm will sound for 60 seconds.
- You can switch off this alarm by inputting a correct user code in the normal way.

Battery strength indicator:

- When battery life is running low the green light will turn a red colour during normal use. When this happens you should install some new batteries.

Burton Safes Ltd.

Units 12, Brockholes Business Park, Rock Mill Road, Brockholes, Holmfirth, HD9 7BN
Tel: 01484 663388, Fax: 01484 666338, E-mail: enquiries@burtonsafes.co.uk