

Crown electronic lock



How to use out of the box

The factory code is set at * 123#

1. Press the * key first. (red light turns on and it beeps)
2. Press numbers, 1,2,3 (beeps with the red light on.)
3. Press the # key. (green light turns on.)
4. Turn safe's handle to open position. Door Opens.

*Note

1. If a wrong code is pressed, it beeps repeatedly and the red light turns on.
2. If the wrong code is pressed 3 times or more, all operations are stopped for three minutes. Press the correct code when it beeps after 3 minutes, and the lock operates properly.

How to close

1. Close the door
2. Turn handle to closed position
3. Press #
4. Turn the handle right and left to make sure that the door is locked

How to change the number code

1. Press the Change switch located at the back of the door (green light turns on and lock beeps)
2. Press the *
3. Press New Code (up to 15 digits)
4. Press the #. If you hear three beeps, the New Code is set successfully

Test

Test with the Door Open. Lock and unlock the bolts using the New Code. Go to step 1 if there is a problem

How to replace the battery

Blinking green light when pressing the * key indicates that the battery is running low.

Replace 1.5V (Alkaline) x 4 batteries with new ones.