

PROTECTOR E-COMPACT KEY BOX INSTRUCTIONS

Read this manual carefully before you start using the safe.

ALWAYS KEEP THE TWO EMERGENCY KEYS SUPPLIED OUTSIDE THE SAFE

OPENING THE SAFE

To open the safe for the first time press **1, 5, 9 and # key**.

An operating signal will be heard.

After pressing # key a green light will show.

Turn the knob clockwise to open the door

CLOSING THE SAFE

Push the door firmly closed and turn the knob to the left. The door will lock automatically.

PROGRAMMING A PERSONAL CODE – keep the door open until you are familiar with this procedure

- Press the red button on the inside of the door, which is located near the hinges.
- Release it and you'll hear a beep.
- Choose a personal code of 3 to 8 digits
- Push those numbers on the keypad
- Finish with # key to confirm.

Be sure to keep a note of your personal code in a safe place.

Now check several times with the door open that your code has been entered correctly by keying in the numbers you have chosen, followed by #

If the above is working correctly, you can close the door and turn the knob to the left, after about 5 seconds, the electronic locking mechanism will secure the safe.

If an invalid code is entered you will hear multiple beeping sounds.

If a wrong code is entered four times the safe will be out of order for five minutes.

WAIT 5 AT LEAST 5 MINUTES BEFORE TRYING AGAIN

After entering the correct code, you have about 5 seconds to open the door before the lock automatically closes again. If this happens you should enter your personal code again.

REPLACING THE BATTERIES

The batteries are found inside the safe, to change the batteries proceed as follows:

Open the safe (with the emergency key if necessary).

Locate the battery holder and remove the cover.

Carefully replace the batteries with **4 x 1.5V AA size ALKALINE batteries**.

Replace the battery compartment cover..

WARNING FOR REPLACING THE BATTERIES

If the batteries are low, then the top light red light shines to indicate that the batteries need replacing. This should be done as soon as you can after noticing the red warning light.

DO NOT RISK LEAVING THIS TOO LONG

MASTER KEY

For emergencies your safe is supplied with a mechanical master key system.

ALWAYS KEEP THE TWO EMERGENCY KEYS SUPPLIED OUTSIDE THE SAFE

If you have forgotten your personal code, remove the rubber cap on the front of the safe to reveal a keyhole. Carefully insert the key – do not force it – and turn the key to the left (counter clockwise). Turn the dial to right to open the safe.