

- c. Remove the emergency keys from the plastic bag and fully insert into the key lock.
- d. Turn the emergency key counter-clockwise to a positive stop.
- e. Hold the key in counter-clockwise position, and turn the knob clockwise to open the door.

NOTE: for your total security, duplicates of the emergency key -ARE NOT AVAILABLE. Therefore, please secure your emergency keys in a safe place. In case the emergency keys are lost or damaged, please contact your local locksmith.

SETTING THE CODE

1. How to set the user code

- a. Press "START" Button, the LED display will show "- - - - -"
- b. Enter your 6 digit code, and then press the "RESET" button which located at the back of door.
- c. The LED display will show " In ", the new user code is set.

If you want to reset the user code, just repeat the above process.

2. How to set the emergency code

- a. Press the " RESET" button, the LED display will show "- - - - -", and "- - - - -" will flash.
- b. Then press the "START" button, the "- - - - -" will stop flashing.
- c. Enter your own emergency code.
- d. The LED display will show " In ", the new emergency code is set.

If you want to reset the emergency code, repeat the above process.

NOTE: For your security, please set the emergency code different than the user code. Do not use same series of numbers at the beginning of the user code as used with the emergency code.

OPERATE YOUR SAFE

1. How to open

- a. Press "START" button, the LED display will show "- - - - -"
- b. Enter your own user code or emergency code.
- c. The green light will be on and the door is unlocked.
- d. Turn the knob clockwise and pull the door open within 4 seconds.

NOTE: The green light goes out after 4 seconds and the safe will auto-lock again. If the green light is on and the door is not open, please turn the knob back (counter-clockwise) and then turn clockwise again. The door will open. When the wrong code is entered, the yellow light flashes with 3 buzzes, if 3 times the wrong code is entered consecutively, the keypad will auto-lock for 3 minutes.

2. How to lock

- a. Close the door.
- b. Turn the knob counter-clockwise and the door is unlocked.

LOW BATTERY


Every time you use the safe, you need to press "START" button first, when the battery is low, the LED display will show " Lo-BAT ", and you need to replace the battery as soon as possible.

" Use alkaline batteries ONLY".


ELECTRONIC HOME/OFFICE SAFE USER GUIDE



USER GUIDE

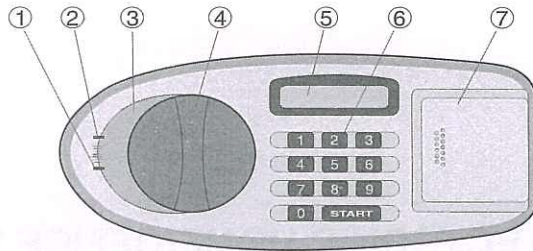

1. green light
2. red light
3. fascia
4. knob
5. led display
6. keypad
7. battery compartment cover
8. reset button
9. door

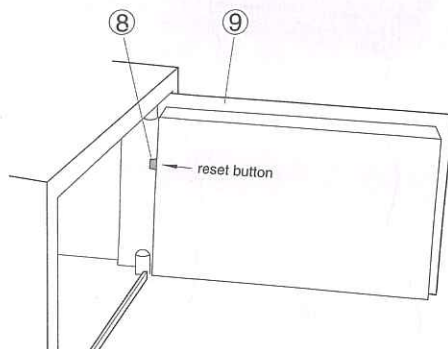

Congratulations on your purchase of our electronic Home/Office safe. Your new safe features a time tested electronic lock that offers you changeable user code and emergency code. An additional feature is the external battery compartment and LED display. It also has a high security emergency key to open the safe in case you forget the user code & emergency code. You could conveniently and safely store your belongings and other valuables in your home or office. PLEASE READ AND FOLLOW THE INSTRUCTIONS CAREFULLY BEFORE USING THE SAFE.

PREPARATION

1. Installation

This safe is designed to help you protect your valuables against theft and is not fire proof. For best security, you should BOLT the safe to the wall or floor and store the codes and /or keys in a secret and separate location.

2. Battery

The safe electronic lock is power supplied by four LR6 (AM3, AA) / 1.5V alkaline batteries. To install the batteries, remove the battery compartment cover on the front panel of the door and put in four LR6 (AM3, AA) alkaline batteries. Please pay attention to the polarity of the battery. Under normal use, the batteries could last for one year. When you install the batteries into the external battery compartment, the LED display will show "TEST" and then show "GOOD". The safe completes auto check and you could start to use the safe.

3. Code

The safe has 2 sets of codes (user code and emergency code), both codes are of 6 digits. The factory packed your safe with the door locked. For your security, there is not preset electronic code. You could open the safe with the attached emergency key. (Refer to section EMERGENCY KEY). Then you could install the batteries and set your own user code and emergency code.

EMERGENCY KEY

Upon first receipt of the safe or in case both electronic codes are unknown, you could still open the safe with the emergency key supplied by factory. Store the emergency key in a secure, safe and separate location from your safe.

- a. Slide the battery compartment cover the RIGHT and remove.
- b. Remove the batteries to access the emergency key lock.

