



UNITED KINGDOM

APEX HOUSE • 1 ORRELL MOUNT • LIVERPOOL
L20 6NS • UNITED KINGDOM
+44 (0)151 944 6444



FRANCE

19 RUE DES HALLES
16510 VERTEUIL SUR CHARENTE • FRANCE
00 33 (0) 5 45 89 68 80



GERMANY

PHOENIX SAFE • DEUTSCHLAND GMBH
BAHNSTR. 23 • D-42327 WUPPERTAL
0049-202-69519-0



ITALY

VIA MONTE ROSA 28 • 20049
CONCOREZZO • MILAN • ITALY
39 039 5965844



SPAIN

AVDA • DE LA INDUSTRIA • 52 POLÍGONO INDUSTRIAL
28823 COSLADA • MADRID • ESPAÑA
0034 (91) 6736411



KC0600E

OPERATING INSTRUCTIONS & GUARANTEE REGISTRATION



GUARANTEE REGISTRATION

Please submit your guarantee registration by visiting our website
www.phoenixsafe.com and clicking on guarantee registration.

For further assistance or information please contact us on 0151 944 6444.
APEX HOUSE, 1 ORRELL MOUNT, LIVERPOOL, L20 6NS,
UNITED KINGDOM | +44 (0)151 944 6444



GARANTIE

Pour une meilleure sécurité, nous vous recommandons d'enregistrer votre
garantie en ligne par notre site: www.phoenixsafe.com et en cliquant sur
enregistrement de garantie.

19 RUE DES HALLES, 16510 VERTEUIL SUR CHARENTE,
FRANCE | 00 33 (0) 5 45 89 68 80



GARANTIEKARTE

Aus Sicherheitsgründen empfehlen wir Ihnen, Ihre Garantiekarte online auf
unserer Website www.phoenixsafe.com per Mausklick auf der Schaltfläche
„Garantieanmeldung“ auszufüllen.

DEUTSCHLAND GMBH, BAHNSTR. 23, D-42327 WUPPERTAL 0049-202-69519-0



REGISTRAZIONE DELLA GARANZIA

Per una maggiore sicurezza vi raccomandiamo di inoltrare la vostra
registrazione della garanzia visitando il nostro sito web: www.phoenixsafe.com
e cliccando su registrazione della garanzia.

VIA MONTE ROSA 28, 20049, CONCOREZZO, MILAN, ITALY | 39 039 5965844



GARANTÍA

Para mayor seguridad, le recomendamos que cuando acceda a nuestra página web
www.phoenixsafe.com, haga clic en Registro de garantía e introduzca su
registro de garantía.

AVDA, DE LA INDUSTRIA, 52 POLÍGONO INDUSTRIAL, 28823 COSLADA, MADRID,
ESPAÑA | 0034 (91) 6736411

CODES - THE BASICS

- The KitLock has four code levels available:
 - Master Code
 - Sub-Master Code
 - User Code
 - Technician Code
- The KitLock is supplied with two factory set codes:
 - Master Code: 55 44 33 22
 - User Code: 00 99
- When fitted, immediately change the Master Code and User Code.
- All Master Codes and Sub-Master Codes are 8 digits long.
- All User Codes are 4 digits long.
- All Technician Codes are 6 digits long.
- The lock 'open' time is set at 4 seconds.

FUNCTIONS

Before programming, select the most appropriate function for the application: A) or B) - See special Master Code set up commands.

A) PRIVATE USE

Important Note: This is the default function and is already pre-programmed in new locks. This is the most common function and is used where the same code will be repeatedly used.

B) PUBLIC USE

The user enters their own personal four-digit code twice, the second time to confirm the correct code. This locks the lock. The same code is entered once only to open the lock before being erased and ready for the next user. This function is used for short term, multi occupancy applications, e.g. a locker in a leisure centre.

OPERATING INSTRUCTIONS

Note: The KitLock has a 10 button keypad and a # button. The # button is hidden beneath the handle when in the locked position.

Blue LED = Code accepted | Red LED = Code rejected

CODES The lock has the following code levels:

MASTER CODE

The Master Code can:

- Open the lock
- Change the Master Code
- Set / Change / Delete the Sub-Master and User Code
- Select between Private and Public Functions
- Activate/deactivate Technician Code

SUB-MASTER CODE

The Sub-Master Code can:

- Open the lock
- Change the Sub-Master
- Set / Change / Delete / the User Code

USER CODE

The User Code can:

- Open the lock
- Change the User Code

TECHNICIAN CODE

The Technician Code can:

- Open the lock
- A code cannot be programmed into more than one level.

LOST CODE PROCEDURE

Note: The procedure requires the door to be open

- Remove the rear-fixing bolt and swing the lock over the edge of the door to reveal the battery compartment.
- Remove one battery.
- Press and hold the 1 button, replace the battery, the Blue LED will flash twice, release the 1 button. Within three seconds press the 1 button three times. The Blue LED will flash twice and the lock will have reverted to the factory Master Code 55 44 33 22 and all other stored settings will be erased.

PENALTY TIME


- Entering three incorrect codes will cause the lock to shutdown for 10 seconds.

BATTERY POWER

- The KitLock should provide well in excess of 15,000 openings, of 4 seconds each, from 2 x AAA 1.5v cells.

LOW BATTERY

- When the battery power is low the
 - Red LED will flash 3 times before the Blue LED lights, accepting the code. Fit new batteries as soon as this happens. The lock will operate for 100 times with low battery.
- Code accepted
- Code rejected low battery indication

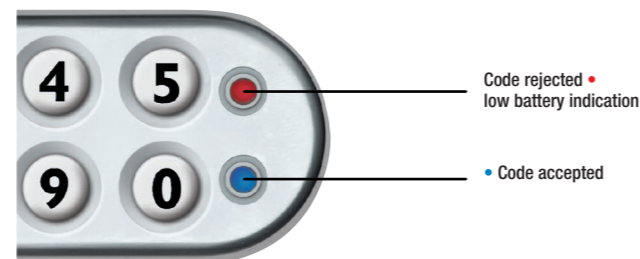

BATTERY FAILURE OVERRIDE


The KitLock has been designed so an external PP3 battery can be placed against the contact points surrounding the Blue and Red LED's so the lock can be opened to replace the batteries should they fail.

The procedure is as follows:

- Place the contact points of the PP3 battery against the contact points surrounding the Blue and Red LED's.
- The positive + PP3 terminal against the Red LED contact point and the negative - PP3 terminal against the Blue LED.
- Enter the Master Code.
- The motor will withdraw the locking pin allowing the lock to be opened.
- Fit new batteries by removing the upper fixing bolt and swinging the lock down over the edge of the door. Refit the lock.

PROGRAMMING

To program – the lock must be in the open position with the # button visible. Every program command must commence by pressing the # button, followed by either the Master Code, Sub-Master Code or User Code.

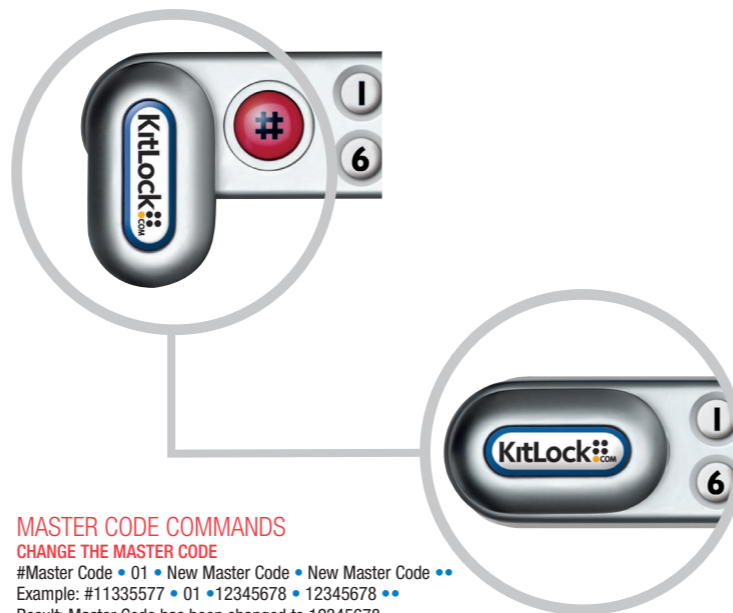

MASTER CODE COMMANDS

CHANGE THE MASTER CODE

#Master Code • 01 • New Master Code • New Master Code ••
Example: #11335577 • 01 • 12345678 • 12345678 ••
Result: Master Code has been changed to 12345678.

SET OR CHANGE THE USER CODE

#Master Code • 02 • User Code ••
Example: #11335577 • 02 • 9999 ••
Result: New User Code 9999 now operative.

DELETE USER CODE

#Master Code • 03 ••
Example: #11335577 • 03 ••
Result: User Code deleted.

SET OR CHANGE THE SUB-MASTER CODE

#Master Code • 04 • Sub-Master Code • Sub-Master Code ••
Example: #11335577 • 04 • 87654321 • 87654321 ••
Result: Sub-Master Code 87654321 now operative.

DELETE THE SUB-MASTER CODE

#Master Code • 05 • 05 ••
Example: #11335577 • 05 • 05 ••
Result: Sub-Master Code deleted.

SUB-MASTER CODE COMMANDS

CHANGE THE SUB-MASTER CODE

#Sub-Master Code • 06 • New Sub-Master Code •
New Sub-Master Code ••
Example: #87654321 • 06 • 10101010 • 10101010 ••
Result: Sub-Master Code has been changed to 10101010.

SET OR CHANGE THE USER CODE

#Sub-Master Code • 07 • User Code ••
Example: #87654321 • 07 • 6666 ••
Result: New User Code 6666 now operative.

DELETE USER CODE

#Sub-Master Code • 08 ••
Example: #87654321 • 08 ••
Result: User Code deleted.

USER CODE COMMANDS

CHANGE THE USER CODE

#User Code • New User Code • New User Code ••
Example: #2244 • 6688 • 6688 ••
Result: User Code now 6688.

SPECIAL MASTER CODE COMMANDS

SET A) PRIVATE USE

#Master Code • 26 ••
Example: #11335577 • 26 ••
Result: The lock will revert back to default A) Private Use Function.
Factory set User Code 2244 will now work repeatedly until reprogrammed.

SET B) PUBLIC USE

#Master Code • 24 ••
Example: #11335577 • 24 ••
Result: The lock will now remain open until the next user enters their own personal code into the lock as follows:
Step 1 – Enter 4 digit code • Confirm 4 digit code ••
Close the locker which will now be locked.
Step 2 – Enter the same 4 digit code •• the lock will now open and remain open until next 4 digit code is entered.
Note: When locked in this mode • LED will flash every 5 seconds to indicate the locker is locked.

SET TECHNICIAN CODE

#Master Code • 99 • Technician Code • Technician Code ••
Example: #11335577 • 99 • 555555 • 555555 ••
Result: The lock is automatically set into B) Public Use Function and allows the programmed Technician Code to open the lock WITHOUT the entered single use code being erased.
Note: If lock is opened with a Master Code the User Code will be erased.